

WAVELENGTH

760–1100 nm

1100–1700 nm

1700–2300 nm


2300–2900 nm

Superluminescent Diodes (SLD): 850 nm

If you are looking for a combination of high brightness and low coherence, one of our nanoplus SLD is the light source of choice. Its emission peak can be freely selected in the range between 760 and 2900 nm to suit any desired application.

Key features:

- BROADBAND
- HIGH-POWER
- SMALL FOOTPRINT

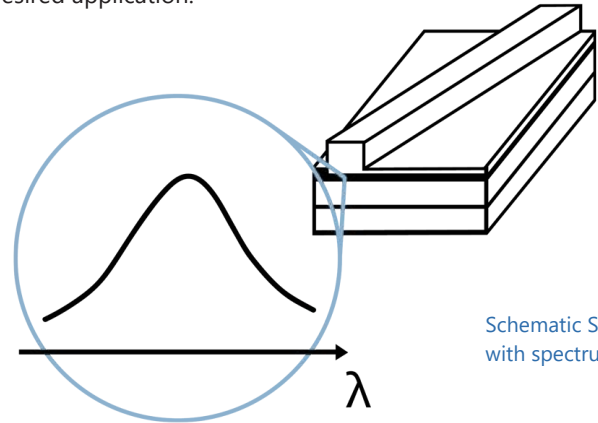

Schematic SLD
with spectrum

Any **custom wavelength** is possible: You tell us what you need and we deliver it. With our outstanding technology we design any wavelength **between 760 nm and 2900 nm** with an accuracy of ± 10 nm.

Our SLD exhibit a **large spectral width** up to 80 nm around the specified centre wavelength.

The **high output power** of **several mW** leads to a stronger signal and increases your measurement precision. Low power for diverse applications is available on request.

We offer **various packaging options**, e. g. several free space housings including TEC and NTC, fiber coupling and **custom designs**. You tell us what you need!

Long-term stability is what our customers really want! Even in **harsh environments** nanoplus devices perform excellently – low maintenance warranted.

“Do not change your ideas, let us deliver the SLD that fits your application.”


If you require **custom specifications**, please contact us. Nearly 80 % of our devices are more or less customer-specific.

As nanoplus is a **fully vertically integrated company**, we control the whole process chain from design to packaging. Both nanoplus production facilities are based in **Germany**.


To guarantee consistent product quality we apply a strict and **ISO certified quality management system** at all levels.

Our Sales and R&D teams have long-standing experience in developing lasers. They will advise you in your design and realization phase as well as after-sales:

We make market leaders!

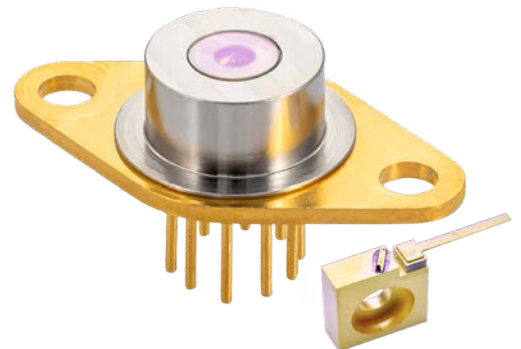


SLD in TO66 and
c-mount housings




Typical Specifications:

850 nm

This data sheet reports performance data of a **sample SLD at 850 nm**, which is representative for the entire wavelength range. The devices are very much suitable as gain chips, for OCT and illumination.

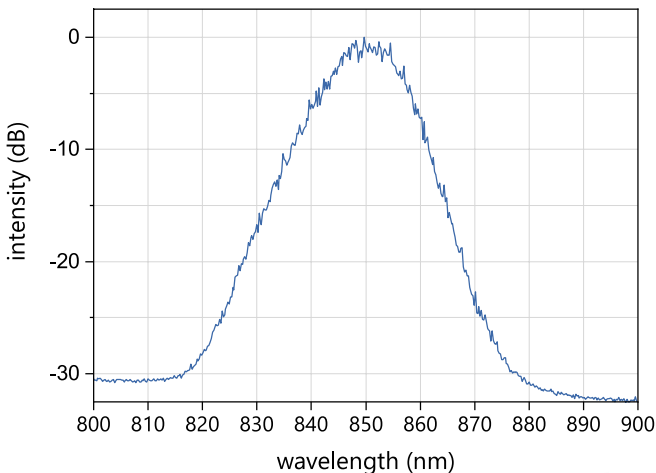

Typical room temperature cw spectrum
of a nanoplus SLD at 850 nm

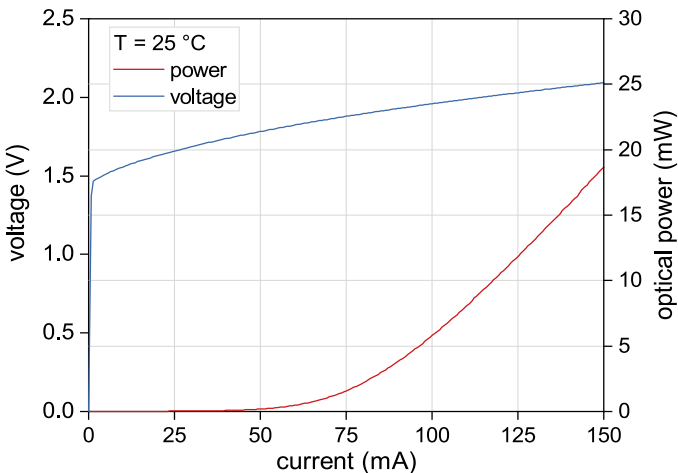

Typical PI and VI curve
of a nanoplus SLD at 850 nm

electro-optical characteristics	symbol	unit	min.	typ	max.
operating wavelength (at T_{op} , I_{op})	λ_{op}	nm	840	850	860
optical output power (at λ_{op})	P_{op}	mW		15	
operating current	I_{op}	mA		150	
operating voltage	V_{op}	V		2.5	
spectral bandwidth (FWHM)	$\Delta \lambda$	nm		15	
current tuning coefficient	C_I	nm / mA	-0.03	-0.01	+0.02
temperature tuning coefficient	C_T	nm / K	0.17	0.22	0.27
operating case temperature*	T_c	°C		+25	
storage temperature*	T_s	°C	-40	+20	+80

* non condensing

packaging

- chip on carrier
- c-mount
- TO66 with TEC and NTC, sealed, AR coated window
- butterfly housing with SM fiber
- Other packaging options may be discussed on request.

Technical drawings & accessories are available at: nanoplus.com/packaging

Please contact sales@nanoplus.com for customized specifications, quotes and further questions.
Visit our website for technical notes, application samples or literature referrals.

nanoplus Nanosystems and Technologies GmbH, www.nanoplus.com, phone: +49 (0) 3693 50 5000-0, email: sales@nanoplus.com
©copyright nanoplus Nanosystems and Technologies GmbH 2024, all rights reserved. Technical data is subject to change without notice.

nanoplus.com